
PLANTING

TREE

CONIFEROUS



- 8. THE USE OF AUGERS OR TREE SPADES FOR EXCAVATING TREE PITS IS NOT PERMITTED.
- 4. WARRANTY TREE REPLACEMENT MUST USE WOOD STAKES ONLY.
- 5. ALL MEASUREMENTS ARE IN MILLIMETRES UNLESS STATED OTHERWISE.

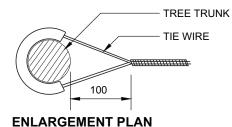

OPTION 1: TWO T-BARS, 38 x 38 x 2440 LONG, DRILL TO RECEIVE 1.5 DIA. GALVANIZED GUY WIRES, THREAD THROUGH 12.7 DIA. BLACK RUBBER HOSE, SECURE AROUND TRUNK AND/OR MAIN BRANCHES. GUIDE WIRES SHOULD BE WOUND TIGHTLY. THERE MUST BE NO PROTRUDING WIRES, WHICH MAY CREATE A HAZARD

OPTION 2: TWO 50 MM DIA. WOOD STAKES, IMMEDIATELY AFTER PLANTING USING BIODEGRADABLE TIE MATERIAL. DRIVEN BESIDE AND BELOW ROOT BALL 300 MM

PLANT TREES 100 MM HIGHER THAN FINISH GRADE

- 100 MM DEPTH MULCH AS PER SPECIFICATION, 75 MM AWAY FROM AROUND PLANT TRUNK

PROVIDE 150 MM HIGH SAUCER RIM

FINISH GRADE

CUT AND REMOVE TOP RING OF WIRE BASKET AND TOP 1/3 OF BURLAP FROM ROOT BALL. REMOVE ALL TIES FROM PLANT

PLANTING SOIL MIX, LIGHTLY COMPACT AND WATER VERY WELL TO ELIMINATE AIR POCKETS

SCARIFY SUBGRADE OF PLANTING PIT

COMPACTED PLANTING SOIL UNDER ROOT BALL

